

F-KEY BARCODES

Programming codes are for the following products:

- Gryphon™ GD4100
- Gryphon™ GM4100
- Gryphon™ GBT4100
- Gryphon™ GD4300
- Quickscan™ QD2100
- Quickscan™ QW2100
- PowerScan™ PD7100
- PowerScan™ PBT7100
- Touch™ TD1100

When scanned these barcodes will perform the Keyboard Function listed (Keep in mind if you have a suffix programmed into the scanner it will transmit that function as well... Example if you scan the enter barcode you will receive 2 enter commands)

