

DataVS2-xx-RE-PRO-x Vision Sensor

QUICK REFERENCE GUIDE

MINIMUM SYSTEM REQUIREMENTS

Check that your Personal Computer meets the following minimum requirements for system interfacing:
 Pentium 1.7 GHz processor
 2 GB of RAM
 Monitor resolution 1280x768 at least
 Network Connection board 100 Mbps
 60 MB Hard Disk drive free space

DESCRIPTION

The DataVS2 series of vision sensors offers the easiest way to solve the most common machine vision applications.



- Compact IP50 housing
- Integrated light LED illuminator
- Selectable lens
- Focus ring
- Standard M12 connectors
- Teach button
- Image sensor 640x480 pixel

ELECTRIC CONNECTIONS

M12 4-pin Ethernet: (connectivity) pin 1: white/orange: Rx+ pin 2: white/green: Tx+ pin 3: orange: Rx- pin 4: green: Tx-	
M12 8-pin (Power and I/O) pin 1: white: RS-232 Rx pin 2: brown: 24 Vdc pin 3: green: Output 4 / Ext. Illuminator Strobe pin 4: yellow: Output 1 pin 5: grey: Output 2 pin 6: pink: RS-232 Tx pin 7: blue: Ground pin 8: red: External Trigger	

INDICATORS

1. Power, green;	
2. Output 1, orange;	
3. Output 2, orange;	
4. Network connection, green.	

CONFIGURATION

Easy Graphic User Interface – Starting Configuration

DataVS2 sensor requires a preliminary setting: this is made in 3 steps by using the Easy GUI interface.



After the start-up of the program, the user is asked to establish a connection to the sensor:



Find sensor: research of the sensors connected to the network
Connect to: connection to the last sensor you have worked with
Offline: open a working session without sensor

If the sensor found is displayed in red, select Configure and follow the instructions

Step 1: Image Setup

The first step allows handling the connection to the sensor and sets the parameters related to the image quality. Once the desired result is achieved, the image can be saved and set as the reference for the sensor operations.



- **Online/Offline** selection
- **Task Selection:** create a new inspection or open an existing inspection from the PC or from the sensor
- **Set Reference Image:** save the image as reference for the following steps

Step 2: Teach

In this step you may configure the desired control.




- **Select Locator:** a locator is a special Tool allowing the sensor to find the object inside the image. It is possible to add at most one locator to current inspection
- **Select Control:** it allows selecting the controls that will be added to the inspection process. It is possible to add more than one control to current inspection.
- **Output Setup:** configuration of the 3 digital outputs.

After selecting the control, it is necessary to position it on the reference image, by clicking in the working area and by moving and resizing the ROI. The Control Panel displays the control's parameters, initialized to default values; it is possible to modify them by using the corresponding controls on control panel.

The STATUS indicator, as well as the ROI contour, reveals the result of control application by assuming red (bad result) or green (good result) colouring.

Step 3: Run



- **VSM \ Run Settings:** configure VSM options and running options for the current inspection.
- **Test:** verification on the PC (Online or Offline) of the selected controls.
- **Run:** store and launch the inspection on the sensor.

CONTROL PANEL

Control	Functioning	Applications
Brightness	Brightness calculation	Presence of cap and spout on bottles.
Contrast	Contrast calculation	Verification of label overprinting.
Width	Measures the object width	Correct assembling
Counting	Counting of objects along a line	Counting of stacked blisters for pharmaceutical industry
Position	Position verification of object edges	Controls the level of liquids in bottles
OCV	Checks presence of characters within ROI	Verification of correct label printing
Barcode	Searches and decodes the contents of one or more Barcode symbols	Identification
Datamatrix	Searches and decodes the contents of one or more Datamatrix symbols	Identification
QRCode	Searches and decodes the contents of one or more QRCode symbols	Identification
Pattern Match	Searches for a pattern inside the target area	Verification of logo on food packages
Pattern Match 360°	Searches a sample position and orientation	Verification of product orientation and position during assembling.
Contour Match	Shape control	Verification of contour integrity of mechanical parts
Contour Match 360°	Searches a sample position and orientation	Verification of product orientation and position during assembling.
Contour Counter 360°	Counting of objects inside an area	Counting of objects during assembling

	Verification of the presence of defects	Quality verification during assembling
--	---	--

COMMUNICATIONS


Communication with the sensor occurs via the Ethernet network.

Direct connection: personal computer is connected directly to device using a "cross cable".



Warning: in case of direct connection the PC requires a fixed IP address

Through LAN: use common network (non-cross) cables normally used to connect devices to routing hubs.

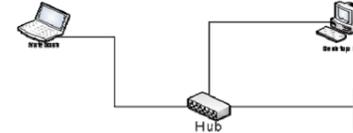

The sensor has the following default IP address:
IP Address: 172.27.101.208
Subnet mask: 255.255.0.0

HARDWARE CONNECTIONS

M12 8-Pin (Power and I/O)


Note: It is not permitted to Disconnect the cable at the connector Power and I/O while it is under power.

Power:
Voltage: 24 Vdc ± 10%
Current: 200 mA max

Input:
Input ON: > 20 Vdc
Input OFF: < 2 Vdc

Outputs:
 3 x PNP transistors with short circuit protection
Output Current: 100 mA max
Output Saturation Voltage: < 2 V

NOTE:
 Output 4 is configurable as External Illuminator Strobe.

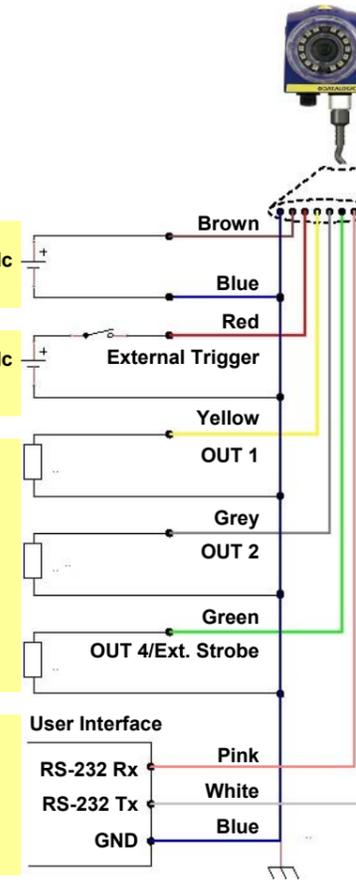


OPERATING DISTANCE

Operating distance(mm)	DataVS2-06-DE-PRO-X	DataVS2-08-DE-PRO-X	DataVS2-12-DE-PRO-X	DataVS2-16-DE-PRO	DataVS2-16-DE-PRO-I
50	39 x 29	24 x 18	16 x 12	-	-
80	58 x 44	38 x 29	26 x 19	-	-
110	78 x 58	53 x 40	35 x 26	-	-
140	99 x 73	67 x 50	45 x 34	-	-
170	119 x 88	82 x 61	54 x 41	-	-
200	138 x 104	196 x 72	64 x 48	48 x 36	-
300	207 x 155	144 x 108	96 x 72	72 x 54	72 x 54
400	274 x 206	192 x 144	128 x 96	96 x 72	96 x 72
500	338 x 254	240 x 180	160 x 120	120 x 90	120 x 90
600	405 x 304	288 x 216	192 x 144	144 x 108	144 x 108

TECHNICAL DATA

Supply voltage (Vs):	24 Vdc ± 10%
Ripple voltage:	1 Vpp max with illuminator 2 Vpp max without illuminator
Current draw with illuminator: (depends on how long illuminator stays on)	max 200 mA at 24 VDC
Outputs:	3 PNP outputs (short circuit protection) (Output 4 is configurable as External Illuminator Strobe)
Output Current:	100 mA max
Output saturation voltage:	< 2 V
Network interface:	M12 4-pins – 10/100 Mbps Ethernet
Optics:	Integrated
Resolution:	640 × 480 (VGA)
Dimensions:	69.8 × 51.5 × 40 mm
Indicators:	4 LED
Setup:	1 Teach-In button
Data retention:	Non-volatile FLASH memory
Operating temperature:	-10 °C ... +55 °C
Storage temperature:	-25 °C ... +75 °C
Vibrations:	14 mm @ 2 to 10 Hz; 1.5 mm @ 13 to 55 Hz; 2 g @ 70 to 200 Hz
Shock resistance: (EN60068-2-27)	11 ms (30 G) 6 shock for every axis
Housing material:	Aluminium alloy / ABS
Mechanical protection:	IP50
Connections:	M12 8-pin A-code, M12 4-pin D-code
Weight:	125 g

MECHANICAL DIMENSIONS

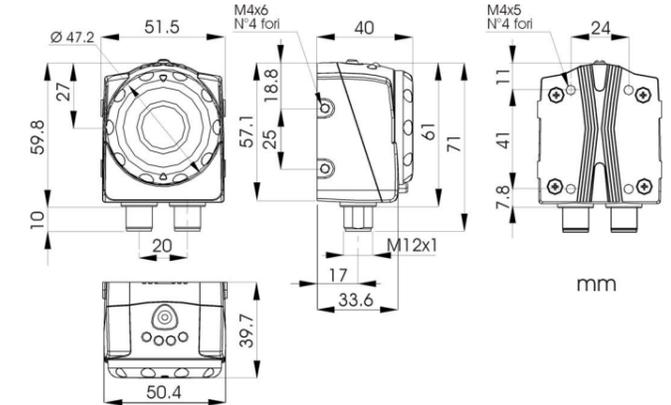

Datalogic S.r.l.
 Via S. Vitalino 13 - 40012 Calderara di Reno - Italy
 Tel: +39 051 3147011 - Fax: +39 051 3147205 - www.datalogic.com

Helpful links at www.datalogic.com: [Contact Us](#), [Terms and Conditions](#), [Support](#).

The warranty period for this product is 36 months. See General Terms and Conditions of Sales for further details.

Under current Italian and European laws, Datalogic is not obliged to take care of product disposal at the end of its life. Datalogic recommends disposing of the product in compliance with local laws or contacting authorised waste collection centres.

© 2011 - 2017 Datalogic S.p.A. and/or its affiliates • ALL RIGHTS RESERVED. • Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates. Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U. All other trademarks and brands are property of their respective owners. Datalogic reserves the right to make modifications and improvements without prior notification.